

1


AN1108: Advanced Features Guide for Si5332

The family reference manual covers the fundamental problem of deriving output frequencies from a given input reference to the Si5332 PLL. The family reference manual also lists all the register fields to control all aspects of the Si5332, but not all of the fields are described in the family reference manual. This application note covers other programming options for the Si5332 that can allow the user to exploit the flexibility offered by the Si5332 architecture.

KEY POINTS

Si5332 Programming Delay

- Single-Chip Clock Tree
- · Low-Frequency Outputs

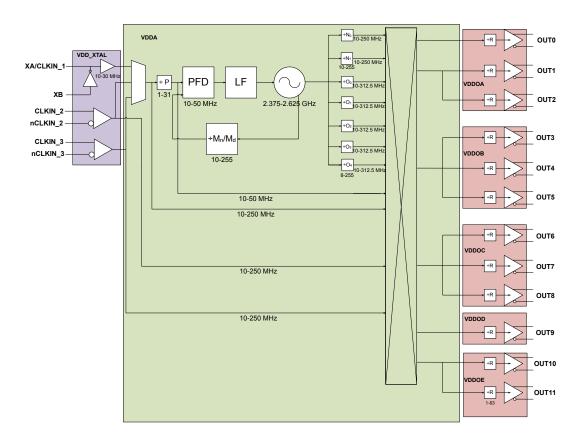


AN1108: Advanced Features Guide for Si5332 • Programming Delay in the Si5332

1. Programming Delay in the Si5332

Delay programming is useful for the following reasons:

- 1. It can be used to de-skew the delay between two outputs as shown in Fig 1.1.
- 2. It can be used to create a set of "multi-phase" output clocks that are useful in applications, such as switching regular reference clock high-speed digital systems that use multiphase clocks to increase data rates as shown in Fig 1.2.
- 3. It can be used to program delays on a clock line to compensate for PCB trace delays as shown in Fig 1.3.

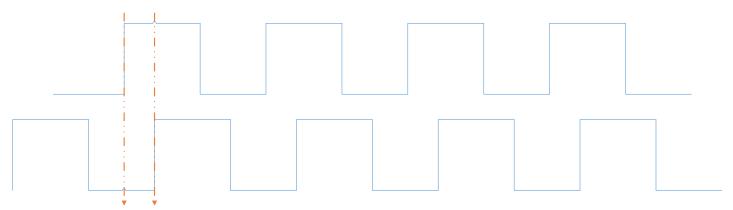

Output to output skew

Figure 1.1. Skew Between Output Clocks

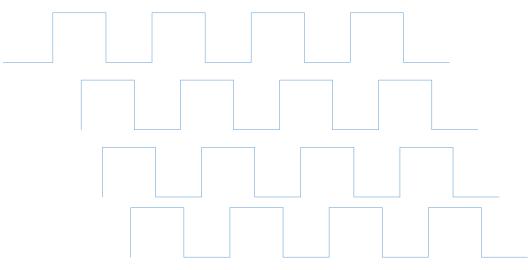


Figure 1.2. Four Multi-phase Output Clock with a Phase Offset of Multiples of $\pi/2$

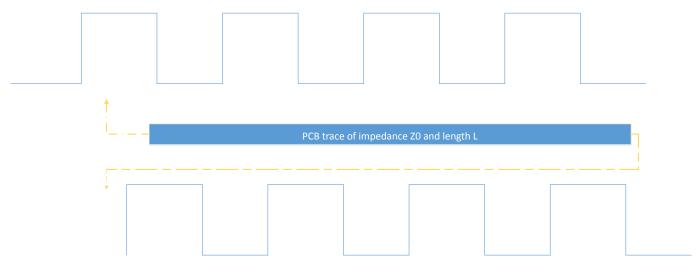


Figure 1.3. Delays Due to PCB Traces

Each programming delay need uses the same single programming tool available to the user. Programming a static phase delay on the output clock is accomplished by setting the OUTx_SKEW register (please refer to the family reference manual for actual register address details). The skew is programable in steps of 35 ps and is an 8-bit register field, i.e., the overall delay can be as high as 8.925 ns. Please note that the Si5332 only supports positive delay programming. However, in many cases, a negative delay can be realized as a 2π + delay.

AN1108: Advanced Features Guide for Si5332 • Clock Tree on a Chip

2. Clock Tree on a Chip

The Si5332 crossbar multiplexer can be used to set up an entire clock tree on a single Si5332. Consider the clock tree requirement shown in the following figure.

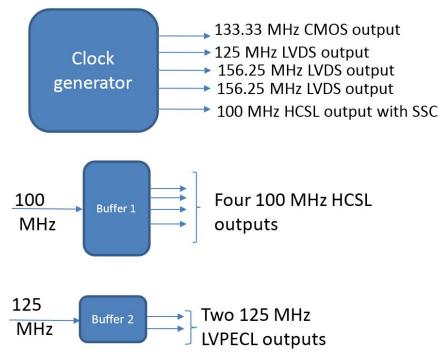


Figure 2.1. Typical Clock Tree Requirement

In such a clock tree requirement, clock generators usually have limitations on generating spread-spectrum clock and/or fractional synthesis. Even if that is satisfied the buffers usually need separate ICs. The Si5332 provides an elegant way of generating all the above needs in a single chip. This flexibility is made possible by the output crossbar multiplexer architecture, as shown below in Figure 2.2 Si5332 Solution for Clock Chip on Tree Requirement on page 5 (please refer to the block diagram to view the full flexibility of the cross-bar multiplexer). This programming flexibility is achieved by setting the following register bit fields:

- 1. Synthesize all the "clock generator" outputs from the crystal input. Refer to the algorithm listed in the Si5332 family reference manual for solving frequency plan needs like these (set output mux registers OMUX0–OMUX4 to reference the clock generator output frequencies).
- 2. Set the OMUX4 to reference the 100 MHz input clock by setting OMUX4_SEL0 to 2 and OMUX4_SEL1 to 7.
- 3. Set the OMUX5 to reference the 125 MHz input clock by setting OMUX5_SEL0 to 3 and OMUX4_SEL1 to 7.

This sets the output mux, and now, each output clock, OUTx, needs to be programmed to reference the correct OMUXy in order to realize the entire clock tree on a single chip. As can be seen, using a single IC has benefits in reduced BOM cost, power, and area for the system board.

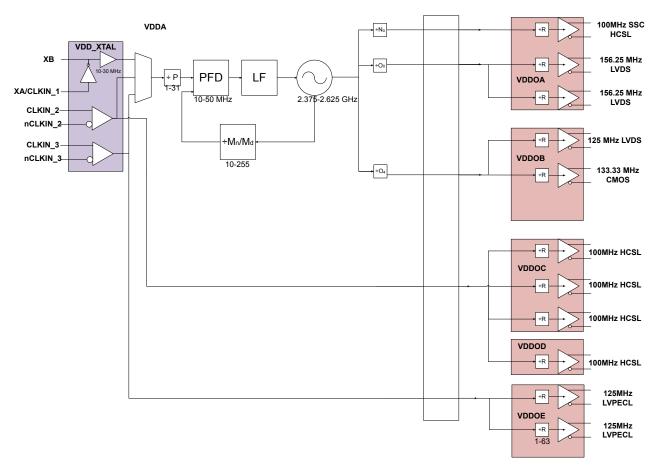


Figure 2.2. Si5332 Solution for Clock Chip on Tree Requirement

AN1108: Advanced Features Guide for Si5332 • Generating Low Frequencies

3. Generating Low Frequencies

The Si5332 divider values limit the output frequencies to as low as 5 MHz but not lower. However, the output cross point mux provides a unique architecture in which the dividers can be cascaded. This cascading allows the user to generate ultra-low frequencies in certain unique applications. For example, if a user needs to generate a 32.768 kHz clock for RTC applications, the Si5332 can be used as shown in the figure below. The register programming is the same as that described in 1. Programming Delay in the Si5332. Take OUT9 and connect it to CLKIN2, and choose the OMUX to drive OUT10 as a divider output from CLKIN2. In this case, set OUT9 to 2.064384 MHz, and then cascade it to the R-divider of OUT10 to divide it down to 32.768 kHz. At the cost of an extra output, a single chip can be used to generate the RTC clock along with other frequencies.

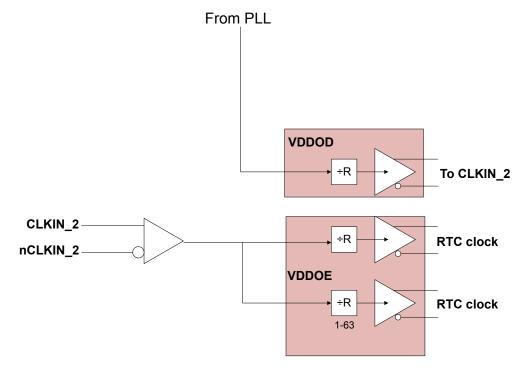


Figure 3.1. Cascading Dividers to Generate Low Frequency Clock Outputs

AN1108: Advanced Features Guide for Si5332 • Conclusion

4. Conclusion

The Si5332 is a versatile clock generator that can support features generally not available on other clock generators, including clock tree on a chip, generation of low frequencies by cascading dividers, and programming delay to offset for PCB skew. This application note provides a guide to programming these features.

SKYWORKS

ClockBuilder Pro

Customize Skyworks clock generators, jitter attenuators and network synchronizers with a single tool. With CBPro you can control evaluation boards, access documentation, request a custom part number, export for in-system programming and more!

www.skyworksinc.com/CBPro



C

Portfolio www.skyworksinc.com/ia/timing

www.skyworksinc.com/CBPro



Quality www.skyworksinc.com/quality



Support & Resources www.skyworksinc.com/support

Copyright © 2021 Skyworks Solutions, Inc. All Rights Reserved.

Information in this document is provided in connection with Skyworks Solutions, Inc. ("Skyworks") products or services. These materials, including the information contained herein, are provided by Skyworks as a service to its customers and may be used for informational purposes only by the customer. Skyworks assumes no responsibility for errors or omissions in these materials or the information contained herein. Skyworks may change its documentation, products, services, specifications or product descriptions at any time, without notice. Skyworks makes no commitment to update the materials or information and shall have no responsibility whatsoever for conflicts, incompatibilities, or other difficulties arising from any future changes.

No license, whether express, implied, by estoppel or otherwise, is granted to any intellectual property rights by this document. Skyworks assumes no liability for any materials, products or information provided hereunder, including the sale, distribution, reproduction or use of Skyworks products, information or materials, except as may be provided in Skyworks' Terms and Conditions of Sale.

THE MATERIALS, PRODUCTS AND INFORMATION ARE PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, WHETHER EXPRESS, IMPLIED, STATUTORY, OR OTHERWISE, INCLUDING FITNESS FOR A PARTICULAR PURPOSE OR USE, MERCHANTABILITY, PERFORMANCE, QUALITY OR NON-INFRINGEMENT OF ANY INTELLECTUAL PROPERTY RIGHT; ALL SUCH WARRANTIES ARE HEREBY EXPRESSLY DISCLAIMED. SKYWORKS DOES NOT WARRANT THE ACCURACY OR COMPLETENESS OF THE INFORMATION, TEXT, GRAPHICS OR OTHER ITEMS CONTAINED WITHIN THESE MATERIALS. SKYWORKS SHALL NOT BE LIABLE FOR ANY DAMAGES, INCLUDING BUT NOT LIMITED TO ANY SPECIAL, INDIRECT, INCIDENTAL, STATUTORY, OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION, LOST REVENUES OR LOST PROFITS THAT MAY RESULT FROM THE USE OF THE MATERIALS OR INFORMATION, WHETHER OR NOT THE RECIPIENT OF MATERIALS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Skyworks products are not intended for use in medical, lifesaving or life-sustaining applications, or other equipment in which the failure of the Skyworks products could lead to personal injury, death, physical or environmental damage. Skyworks customers using or selling Skyworks products for use in such applications do so at their own risk and agree to fully indemnify Skyworks for any damages resulting from such improper use or sale.

Customers are responsible for their products and applications using Skyworks products, which may deviate from published specifications as a result of design defects, errors, or operation of products outside of published parameters or design specifications. Customers should include design and operating safeguards to minimize these and other risks. Skyworks assumes no liability for applications assistance, customer product design, or damage to any equipment resulting from the use of Skyworks products outside of Skyworks' published specifications or parameters.

Skyworks, the Skyworks symbol, Sky5[®], SkyOne[®], SkyBlue[™], Skyworks Green[™], Clockbuilder[®], DSPLL[®], ISOmodem[®], ProSLIC[®], and SiPHY[®] are trademarks or registered trademarks of Skyworks Solutions, Inc. or its subsidiaries in the United States and other countries. Third-party brands and names are for identification purposes only and are the property of their respective owners. Additional information, including relevant terms and conditions, posted at www.skyworksinc.com, are incorporated by reference.

